


**1-direction console.**

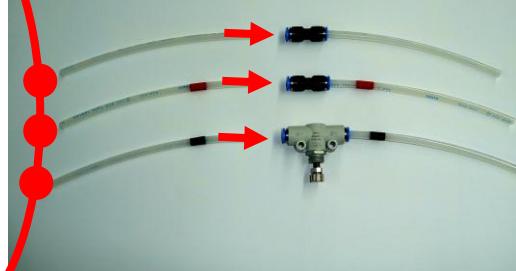


**CONSOLE CONSOLE CONSOLE CONSOLE CONSOLE CONSOLE**




**FRAME FRAME FRAME FRAME FRAME FRAME FRAME FRAME**

**2-direction console.**

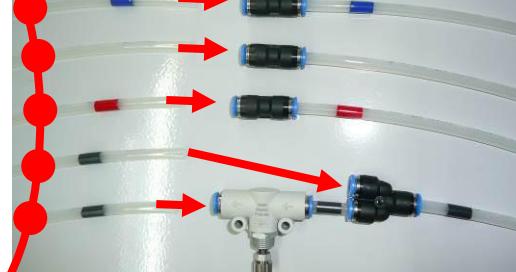


**Digital 1-direction console**

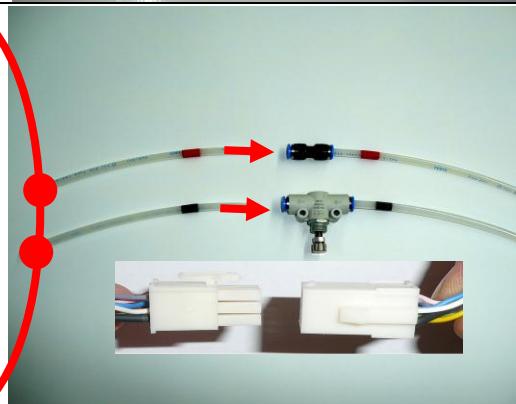


**FRAME FRAME FRAME FRAME FRAME FRAME FRAME FRAME**

**Digital 2-direction console.**

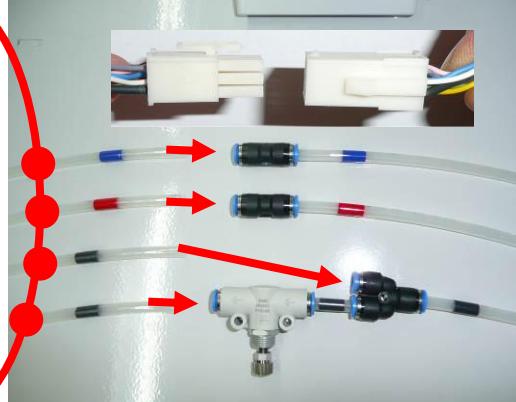

**FRAME FRAME FRAME FRAME FRAME FRAME FRAME FRAME**
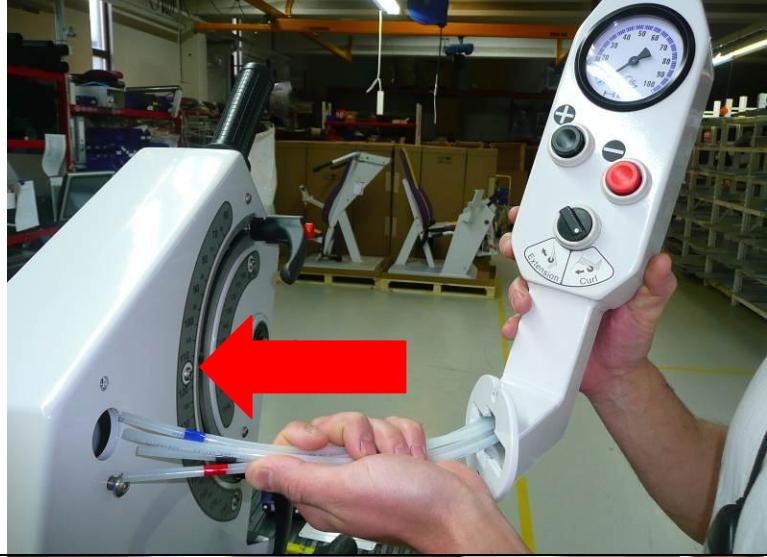
<p>Push the hoses through sidebox hole.</p>	
<p>Attach the lower flange notch of console arm to lower bolt</p> <p><i>Don't scratch the frame</i></p>	
<p>Attach upper bolt and tighten console arm.</p> <p><i>Avoid slipping the key in bolt head.</i></p>	